htc DREAM

Quick Start Guide

Please Read Before Proceeding

THE BATTERY IS NOT CHARGED WHEN YOU TAKE IT OUT OF THE BOX.

DO NOT REMOVE THE BATTERY PACK WHEN THE DEVICE IS CHARGING.

YOUR WARRANTY IS INVALIDATED IF YOU DISASSEMBLE OR ATTEMPT TO DISASSEMBLE THE DEVICE.

PRIVACY RESTRICTIONS

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your PDA Phone.

Limitation of Damages

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HTC OR ITS PROVIDERS BE LIABLE TO USER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES OF ANY KIND, IN CONTRACT OR TORT, INCLUDING, BUT NOT LIMITED TO, INJURY, LOSS OF REVENUE, LOSS OF GOODWILL, LOSS OF BUSINESS OPPORTUNITY, LOSS OF DATA, AND/OR LOSS OF PROFITS ARISING OUT OF, OR RELATED TO, IN ANY MANNER, OR THE DELIVERY, PERFORMANCE OR NONPERFORMANCE OF OBLIGATIONS, OR USE OF THE WEATHER INFORMATION, DATA OR DOCUMENTATION HEREUNDER REGARDLESS OF THE FORESEEABILITY THEREOF.

Contents

1. Welcome to the HTC Dream Quick Start Guide 5
2. Inside the Box 5
3. Getting to Know the HTC Dream 6
4. Installing the SIM Card, Battery, and Storage Card 7
5. Charging the Battery 10
6. Starting Up 10
7. The Home Screen 12
8. Accessing Device Applications and Settings 14
9. Making Your First Call 16
10. Creating Contacts 17
11. Entering Information 19
12. Basic Settings 20
13. Sending a Text Message 25
14. Sending a Multimedia Message 26
15. Using Wi-Fi 27
16. Sending E-mails 28
17. Surfing the Web and Viewing Internet Videos 29
18. Bluetooth 31
19. Managing Your Time 32

20. Taking Pictures 34
21. Copying Multimedia Files to Your Device 35
22. Listening to Music 36
23. Viewing Pictures 37
24. Synchronizing Your Device 38
25. Downloading Applications 39
26. Resetting Your Device 40

1. Welcome to the HTC Dream Quick Start Guide

Congratulations on your purchase of the **HTC Dream**.

This **Quick Start Guide** will help you get started with your Android™ powered Touch Phone. The Quick Start Guide offers information about the basic features and functions that you want to know or use right away after you turn on the device for the first time.

For a more complete guide in using your device, refer to the **User Manual PDF** that we have included in the **microSD**™ card that came with the device. Copy the **User Manual PDF** to your PC for viewing.

2. Inside the Box

You should find the following items inside the box.

- HTC Dream device
- USB cable
- Wired stereo headset
- 1GB microSD™ card
- Battery
- AC adapter
- Pouch
- Quick Start Guide

3. Getting to Know the HTC Dream

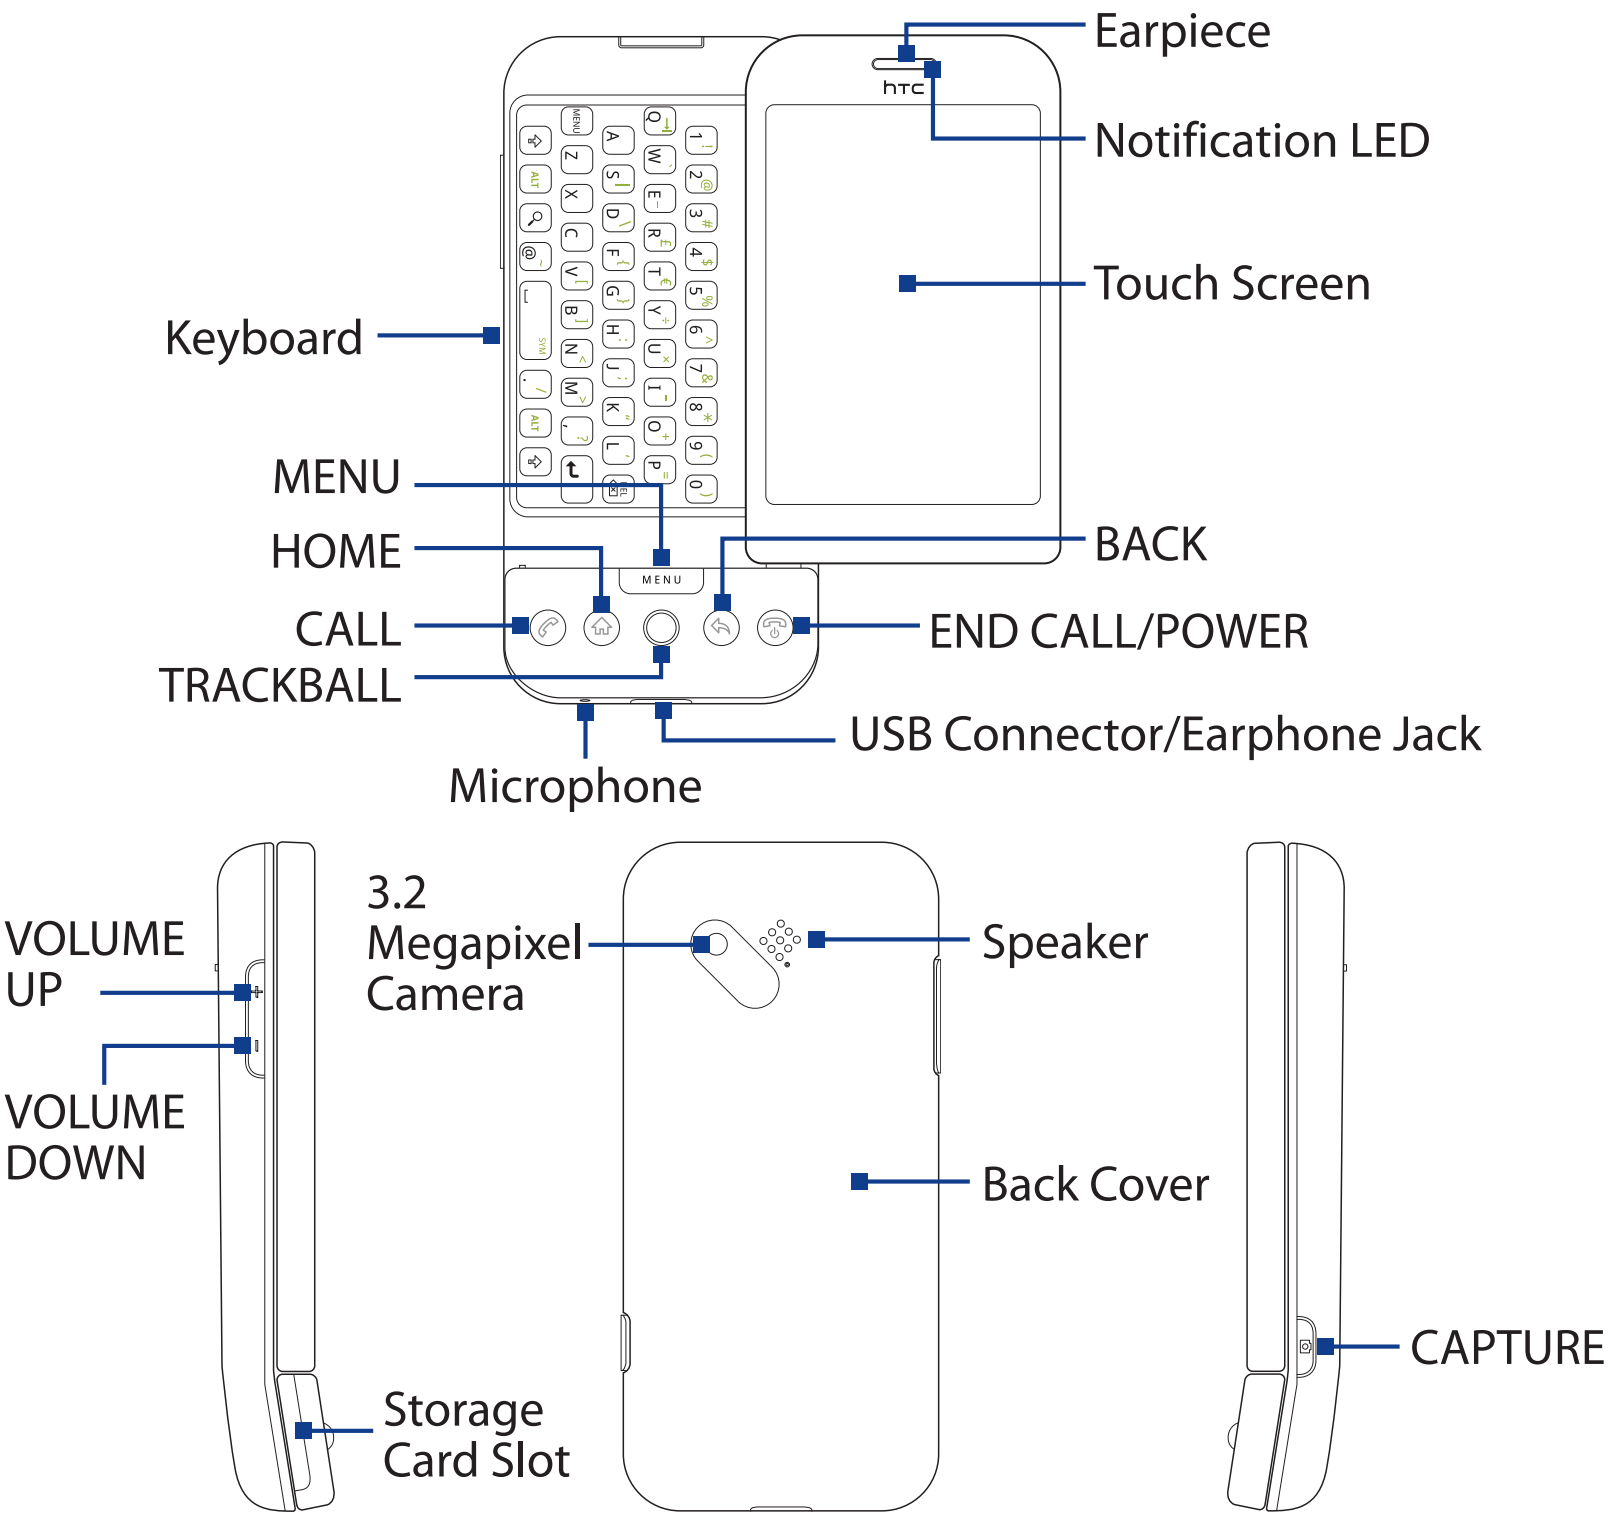

4. Installing the SIM Card, Battery, and Storage Card

Make sure your device is turned off before installing the SIM card, battery, and storage card. You also need to remove the back cover before you can install the battery and SIM card.

To remove the back cover

1. Hold the device sideways with the control buttons on the right.
2. Slide the screen panel up to reveal the keyboard and the back cover release tab.
3. Gently push down the release tab with your finger until the back cover disengages from the device.

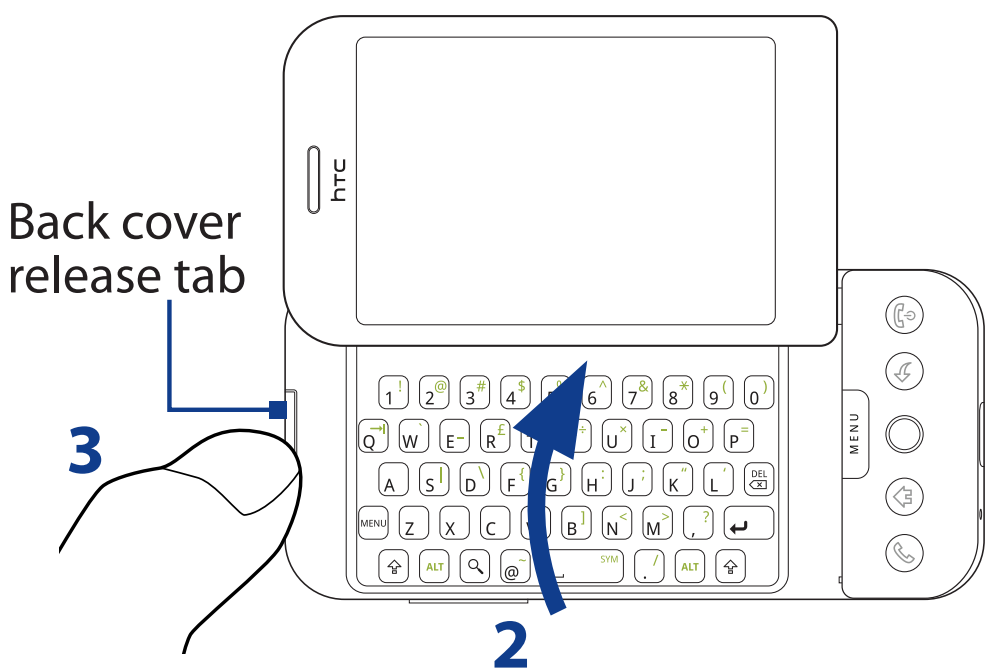

4. Pull the back cover out, then set it aside.

To install the SIM card

1. Locate the SIM card slot, then insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot.
2. Slide the SIM card completely into the slot.

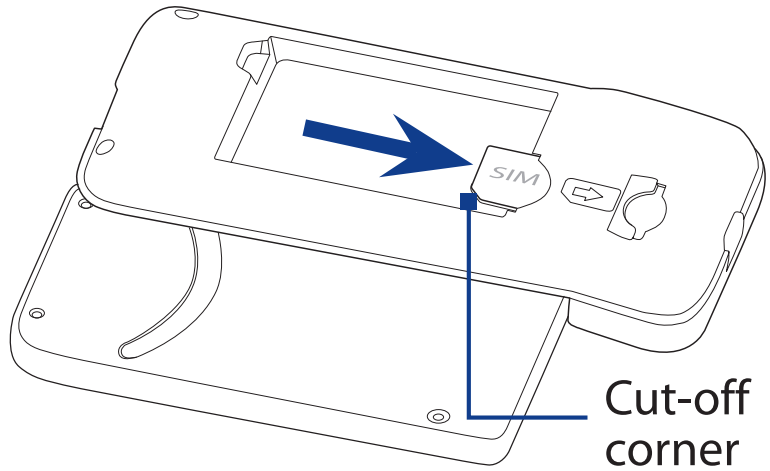

To install the battery

1. Align the battery's exposed copper contacts with the battery connectors inside the battery compartment.
2. Insert the contact side of the battery first then gently push the battery into place.
3. Replace the back cover.

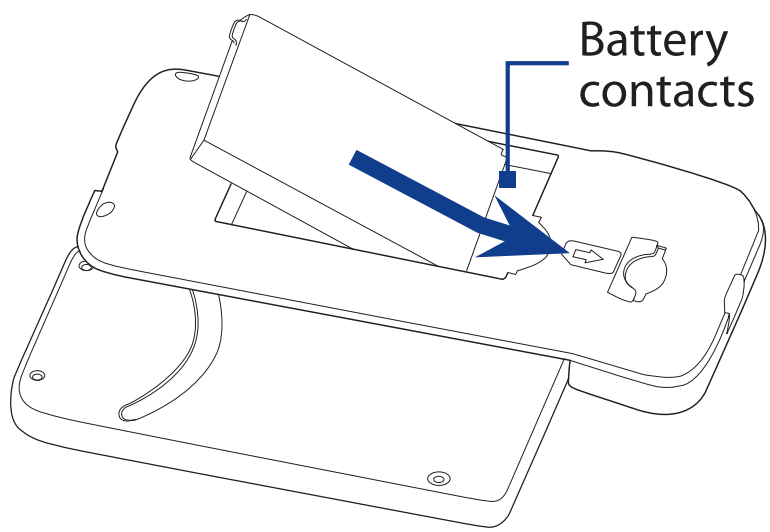

To install the storage card

1. Hold the device sideways with the control buttons on the right.
2. Open the keyboard, then locate the storage card slot at the side of the control buttons.
3. Pry open the storage card slot cover.
4. Insert the microSD card into the slot with its golden contacts facing down until it clicks in place.

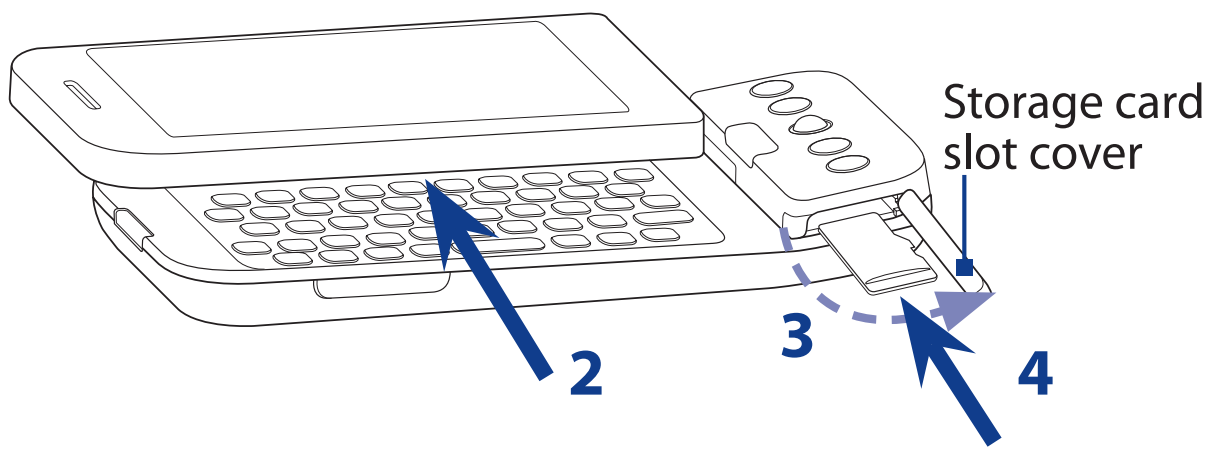

5. Replace the storage card slot cover.

Note Make sure that both ends of the cover are properly seated on the slot. The device will not detect the storage card when the slot cover is not properly replaced.

5. Charging the Battery

New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery.

To charge the battery

1. Flip open the USB connector cover at the bottom panel of your device.
2. Insert the USB connector of the AC adapter to the USB connector on your device.
3. Plug in the AC adapter to an electrical outlet to start charging the battery.
   The battery is fully charged after about **3 hours** of charging.

6. Starting Up

After installing your SIM card and battery and charging the battery, you can now power on and start using your device.

Turn on the power

1. Press the END CALL/POWER button.
2. After you turned on the device for the first time, you will be prompted to create a Gmail account or sign in to your existing Gmail account. Touch the screen to begin.

Create a Gmail™ account and sign in

1. Read the set up information on the screen then touch **Next**.
2. Touch **Create**.

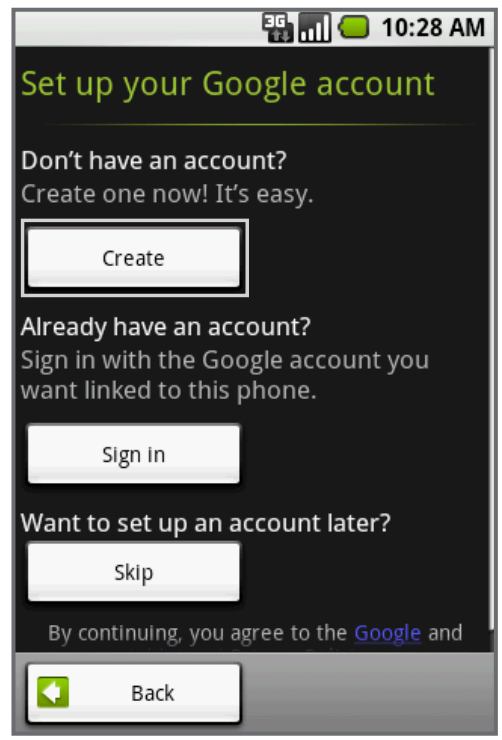
10:28 AM
Set up your Google account
Don't have an account?
Create one now! It's easy.
Create
Already have an account?
Sign in with the Google account you want linked to this phone.
Sign in
Want to set up an account later?
Skip
By continuing, you agree to the Google and
Back

Notes

- If you have an existing Gmail account, touch **Sign in**. Use the keyboard to enter your user name and password, then touch **Sign in**. All e-mails, contacts, and calendar events on your Gmail account will automatically synchronize with your device.
- Touch **Skip** if you want to set up an account later and start using your device. The Home screen will display.

3. Open the keyboard, then enter your name and account user name, then touch **Next**. Follow screen instructions to create your Gmail account.
4. The device synchronizes with your Gmail account. Touch **Finish setup** to display the Home screen.

7. The Home Screen

The Home screen is your starting point for using the applications on your device. You can customize the Home screen to display application icons, shortcuts, folders, and widgets according to your preference.

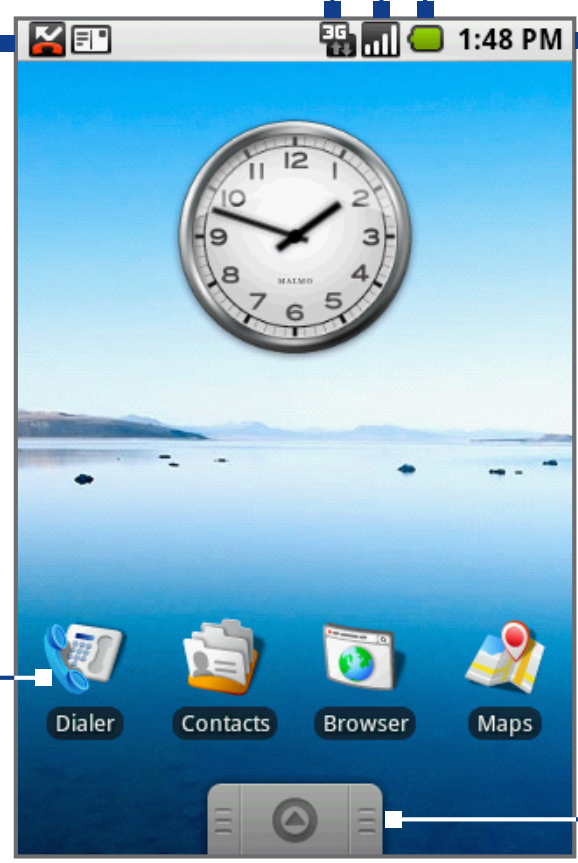

- Notifications. Your call, text, and other notifications appear here.
- Touch and hold this area to display the date.

Touch an icon to open the related application

Touch the **Applications** tab to access the applications of your device.

Tip While in any application, press HOME to display the Home screen.

To go to the left and right side of the extended Home screen

The Home screen extends beyond the screen width to provide more space for adding icons, widgets, and more. Slide your finger horizontally across the screen to go to the left or right side of the extended Home screen.

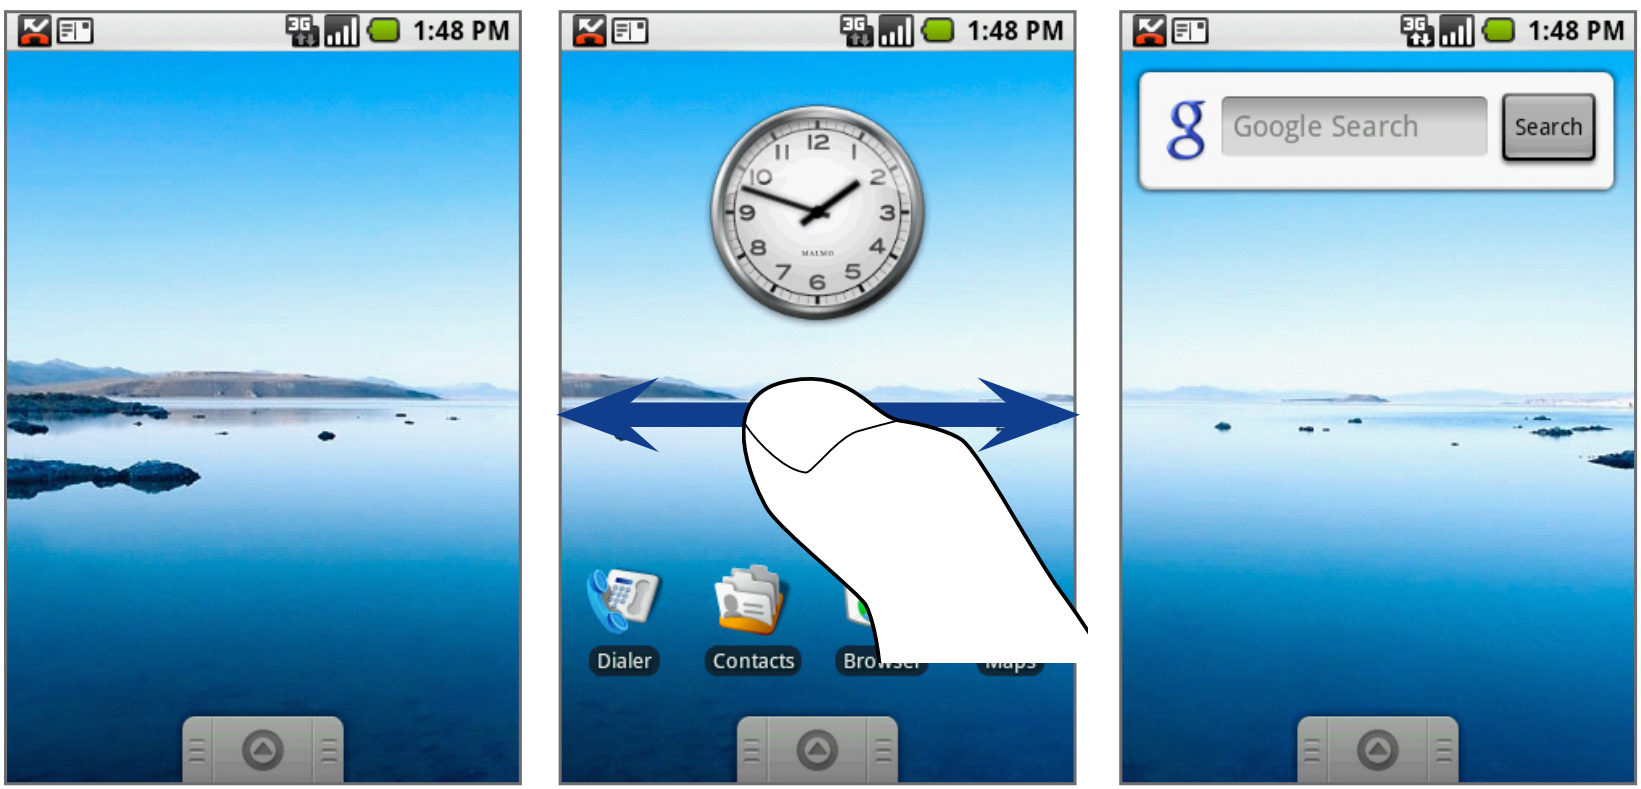

Tip While on an extended Home screen, press HOME to return to the center Home screen.

To learn how to customize the Home screen, refer to the "Getting Started" chapter in the User Manual PDF.

8. Accessing Device Applications and Settings

The **Applications** tab holds all pre-installed applications on your device. This tab will also hold the icons of applications that you download and install from Android Market.

To open the Applications tab

Press HOME, then touch .

On the **Applications** tab:

- Touch an icon to open the related application.
- Scroll up/down on the tab using your finger or the TRACKBALL to view more applications.

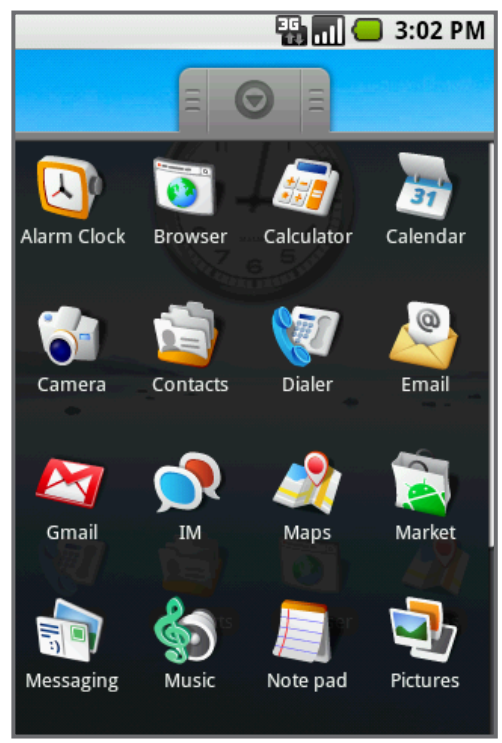

Note To hide the **Applications** tab, touch or press the BACK button.

For complete information about applications that are pre-installed on your device, refer to the User Manual PDF

Control and customize device settings from the **Settings** screen.

To open the Settings screen

- On any application screen, press HOME > MENU, then touch **Settings**.
- On the Home screen, touch the **Applications** tab, then touch **Settings**.

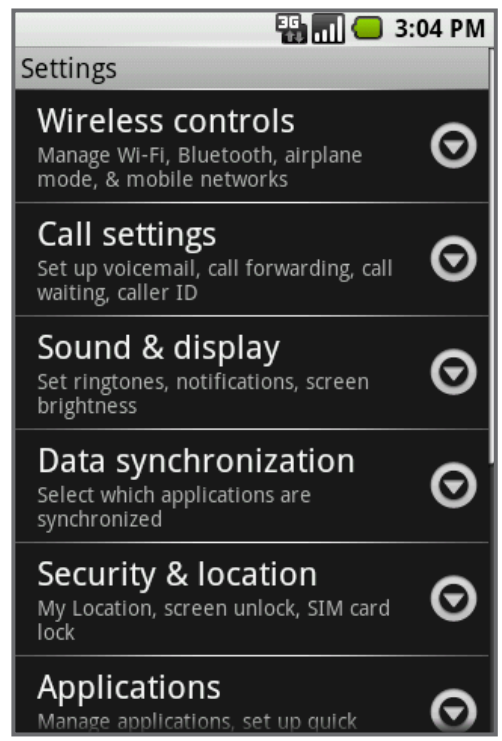

For complete information about the settings on your device, consult the User Manual PDF.

The following sections in this Quick Start Guide will show you how to use basic device functions including how to make a call, enter information, send text and e-mail messages, and more.

9. Making Your First Call

To place a call

1. Press the CALL ( ) button, then touch the **Dialer** tab.
2. Touch the keys on the dialer to enter the phone number.
   If you touched a wrong number key, touch to erase each subsequent digit of a number.
   To erase the entire number, touch and hold .
3. Press the CALL button to place the call.

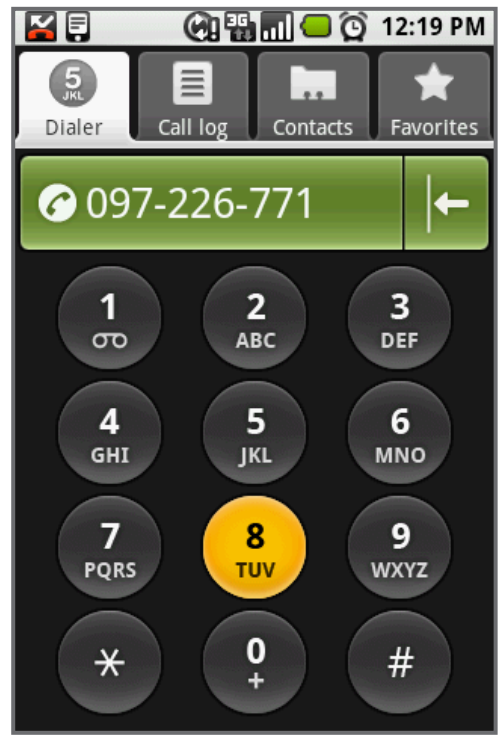

Tip During a call, press the VOLUME UP or VOLUME DOWN button on the left panel of the device to adjust the in-call volume.

To check missed calls

When you have missed calls, you will see the missed call icon ( ) in the status bar. To check who the caller was, touch and hold the status bar, then drag your finger downward on the screen to open the notifications panel. The missed call information will be displayed in the notifications list.

10. Creating Contacts

Contacts gives you quick and easy access to people you frequently communicate with. You can view and create contacts on your device and sync these with your Gmail contacts on the web. You can also import contacts stored on your SIM card.

To add a new contact

1. Press HOME, then touch the **Contacts** tab.
2. Press MENU, then touch **New contact**.
3. Open the keyboard, then enter the contact's name and contact information such as mobile phone number, home phone number, or e-mail address. You can roll the TRACKBALL up or down to move among fields.

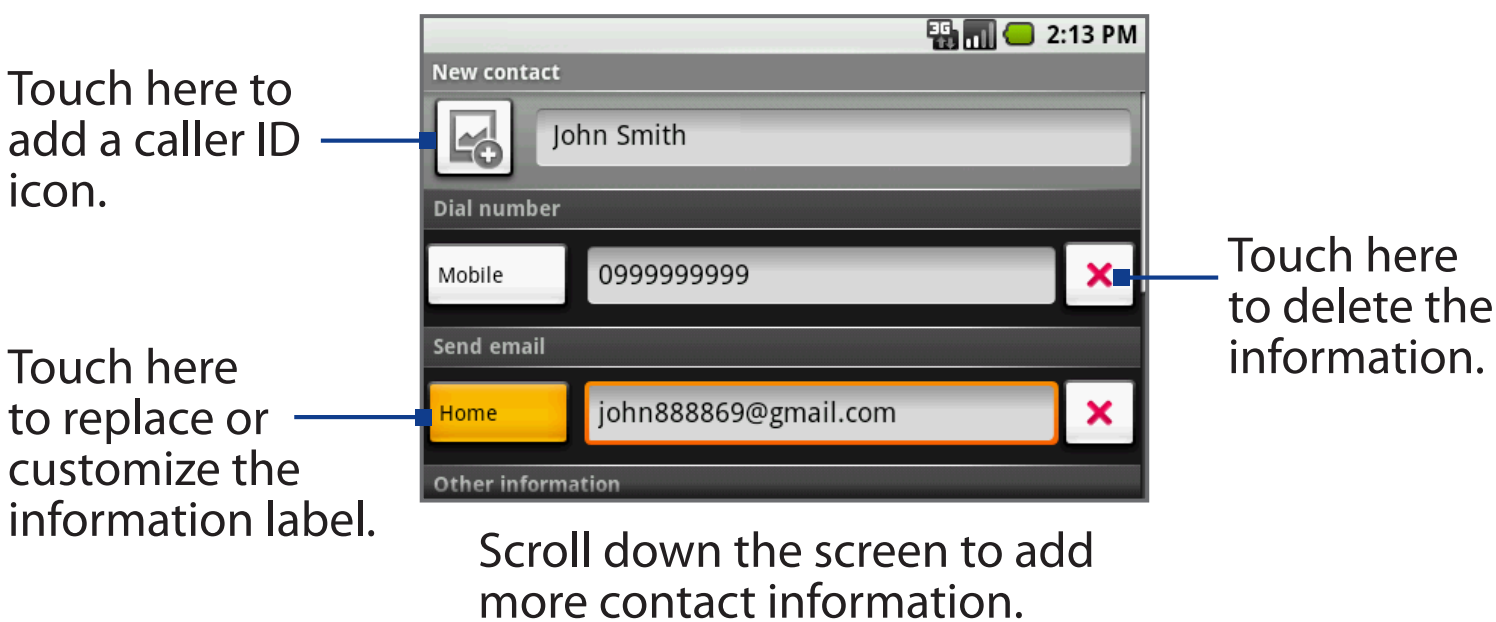

4. Touch **More info** if you want to store additional information for the contact such as a postal address, an instant messaging ID, or additional phone numbers or e-mail addresses.
5. When finished, touch **Save**.

To import contacts from the SIM card

1. Press HOME, then touch **Contacts**.
2. Press MENU, then touch **Import contacts**. Wait for the SIM card contacts to load.
3. Do any of the following:
   - To import a contact, navigate to the contact using the TRACKBALL, press MENU, then touch **Import**.
   - To import all contacts, press MENU, then touch **Import all**.

To call a contact

Press HOME, then touch **Contacts**. In the contacts list, use the TRACKBALL to navigate to the contact you want to call, then press the CALL button. The contact's default phone number — the phone number displayed below their name — is dialed.

For more information on how to initiate other types of communication from the **Contacts** tab, see "Using Phone Features and Managing Contacts" in the User Manual PDF.

11. Entering Information

Open and use the QWERTY keyboard to enter information on your device.

To use the keyboard

1. Hold your device sideways, with the control buttons on the right.
2. Push the screen panel up to reveal the keyboard.
3. To enter text, simply press the keys on the keyboard.

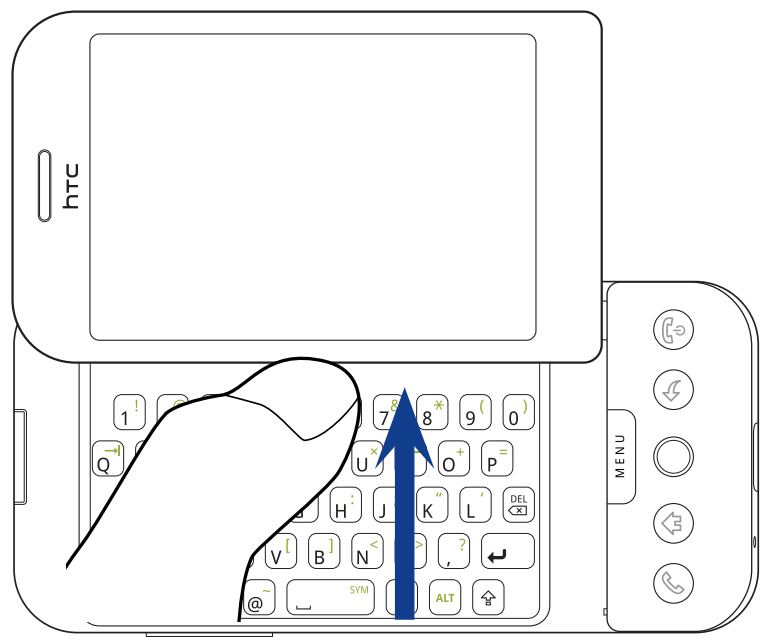

Note The screen automatically changes to landscape orientation when you open the keyboard, except in Browser and Pictures, where you can set the screen orientation depending on your preference.

For more information about using the keyboard, creating application shortcuts, and adjusting the text settings, refer to the "Entering Text" chapter in the User Manual PDF.

12. Basic Settings

Customize your device settings to suit your personal needs.

Volume

Do any of the following to adjust the ringer and media volumes:

- While on any screen or application (except during a call, or when playing music or watching a video), press the VOLUME UP or VOLUME DOWN button on the left panel of the device to adjust the ringer volume to your desired level.

  Tip While in the lowest ringer volume level, press VOLUME DOWN once to set your device to Vibrate mode. While in Vibrate mode, press VOLUME DOWN once to mute your device.

- While playing music or watching a video, press the VOLUME UP or VOLUME DOWN button on the left panel of the device to adjust the media volume to your desired level.

Ring tone

1. Press HOME > MENU, then touch **Settings**.
2. Touch **Sound & display > Phone ringtone**.
3. Select the ring tone you want to use, then touch **OK**.

Wallpaper

You can change the Home screen wallpaper.

1. On the Home screen, press and hold an empty area to open the Add to Home menu, then touch **Wallpaper**.
2. Touch **Wallpaper gallery**.
3. Touch a wallpaper thumbnail to view an enlarged version on the screen.
4. Touch **Set wallpaper**.

Tip You can also use a picture that you have stored in the storage card as the Home screen wallpaper. For more information about customizing the Home screen wallpaper, refer to the "Getting Started" chapter in the User Manual PDF.

SIM card PIN

Enabling the SIM card PIN requires you to enter a PIN number first before you can use the device.

To enable the SIM card PIN

1. Press HOME > MENU, then touch **Settings**.
2. Touch **Security & location**, scroll down the screen, then touch **Set up SIM card lock**.
3. Select the **Lock SIM card** option.

4. Enter the default SIM card PIN using the keyboard, then touch **OK**.
5. To change the SIM card PIN, touch **Change PIN code**.

Tip Emergency calls can be placed at any time, without requiring a PIN.

Screen lock

Locking the screen turns off the display and disables the control buttons to prevent accidental screen touches and button presses when the device is in your bag, purse, or pocket.

To lock the screen

Press the END CALL/POWER button. To unlock the screen and enable the control buttons, press MENU twice.

To create and enable a screen unlock pattern

In addition to locking the screen, you can create and enable a screen unlock pattern. You have to draw the correct unlock pattern on the screen before you can unlock the screen and control buttons.

1. Press HOME > MENU, then touch **Settings**.
2. Touch **Security & location** > **Set unlock pattern**.

3. Read the information on the screen, then touch **Next**.
4. Study the example pattern on the screen, then touch **Next**.
5. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal and/or diagonal direction. Lift your finger from the screen when finished.

   Note You must slide your finger on the screen to create the pattern and not touch individual dots.

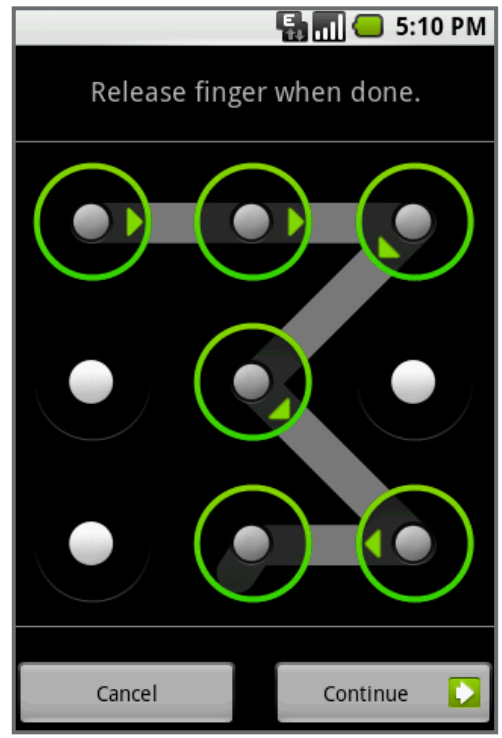

6. The device records the pattern. Touch **Continue**, draw the screen unlock pattern again, then touch **Confirm**.
7. Select the **Require pattern** option to enable the screen unlock pattern.

For more information about the screen unlock pattern, refer to the "Managing Your Device" chapter in the User Manual PDF.

Screen settings

Conserve battery power by adjusting the screen brightness and setting a shorter idle time before the screen turns off.

To adjust the screen brightness

1. Press HOME > MENU, then touch **Settings**.
2. Touch **Sound & display**, scroll down the screen, then touch **Brightness**.
3. Drag the brightness slider to the left to decrease or to the right to increase the screen brightness.
4. Touch **OK**.

To adjust the time before the screen turns off

After a period of inactivity, the device screen turns off to conserve battery power. You can set the idle time before the screen turns off.

1. Press HOME > MENU, then touch **Settings**.
2. Touch **Sound & display**.
3. Scroll down the screen, then touch **Screen timeout**.
4. Select the time before the screen turns off, then touch **OK**.

Tip To turn off the screen quickly, press the END CALL/POWER button.

13. Sending a Text Message

Easily create and send text messages (SMS) from your device.

1. Press HOME, touch the **Applications** tab, then touch **Messaging** > **New message**.
2. Open the keyboard, then enter the mobile phone number of the message recipient in the **To** field.
3. Roll the TRACKBALL down to select the text box, then start composing your message.
4. Touch **Send** or press ↵ to send the text message.

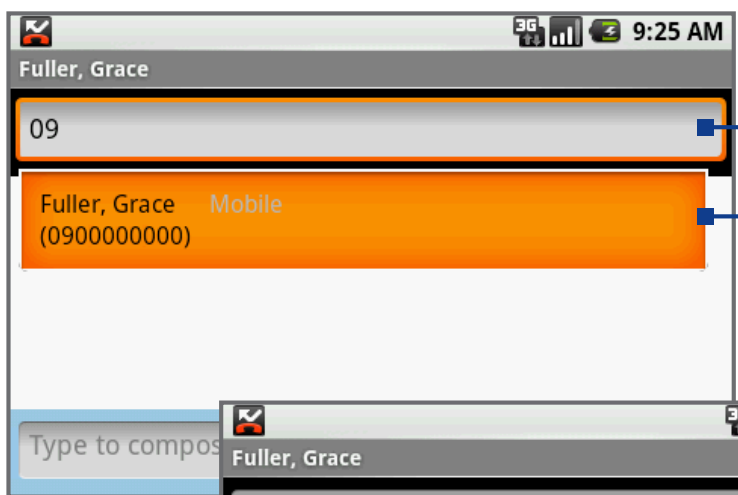

Enter the mobile phone number here.

Touch here to automatically enter the mobile phone number of the matched contact.

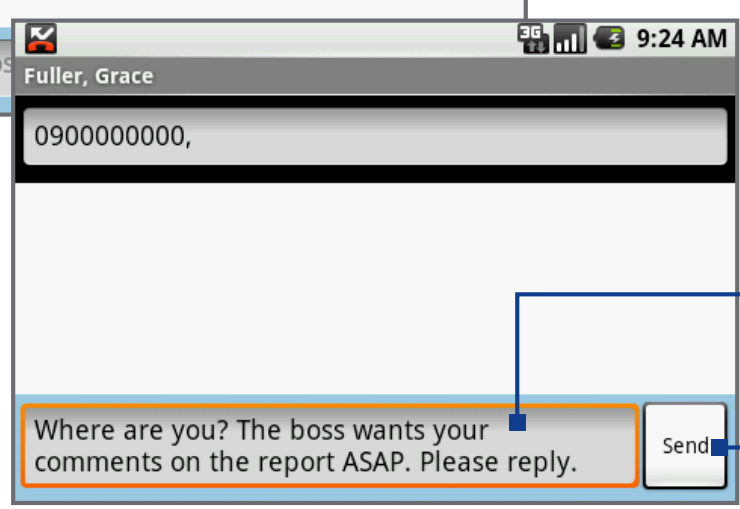

Enter your text message here.

Touch here to send the message.

14. Sending a Multimedia Message

Create and send multimedia messages (MMS) that contain pictures, slideshows, or audio clips.

1. Press HOME, touch the **Applications** tab, then touch **Messaging** > **New message**.
2. Open the keyboard, then enter the mobile phone number or e-mail address of the message recipient in the **To** field.
3. Press MENU, touch **Add subject**, then enter your message subject.
4. Roll the TRACKBALL down to select the text box, then enter your message.
5. Press MENU, touch **Attach**, then select a message attachment on the menu. You can attach a picture from the storage card, a new picture captured by the camera, an audio file, an audio recording, or a picture slideshow.
6. After selecting or creating the attachment, touch **Send** or press ↵ to send the multimedia message.

For more information about creating and sending text and multimedia messages, refer to the "Exchanging Messages" chapter in the User Manual PDF.

15. Using Wi-Fi

You can use Wi-Fi to connect your device to the Internet if you have access to a wireless network.

To connect to an open Wi-Fi network

1. Press HOME > MENU, then touch **Settings > Wireless controls**.
2. Select the **Wi-Fi** check box to turn Wi-Fi on and scan available wireless networks.
3. Touch **Wi-Fi settings**. The network names and security settings (Open network or Secured with WEP) of detected wireless networks will be displayed.
4. Select an open network to connect.

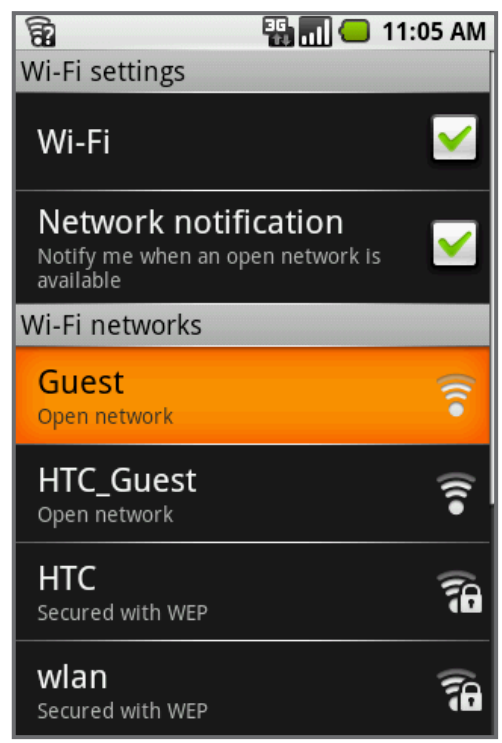

To learn how to connect to a secured network, refer to the "Getting Connected" chapter in the User Manual PDF.

16. Sending E-mails

Use **Gmail**™ to send and receive e-mails on your device.

Note If you have not set up a Gmail account, you will be prompted to create a new one or sign in to an existing account before you can use Gmail.

To create and send an e-mail

1. Press HOME, touch the **Applications** tab, then touch **Gmail**.
2. Press MENU, then touch **Compose**.
3. Open the keyboard, then enter the e-mail address of the message recipient in the **To** field. If you are sending the e-mail to several recipients, separate the e-mail addresses with a comma.
4. Enter the e-mail subject, then compose your message.

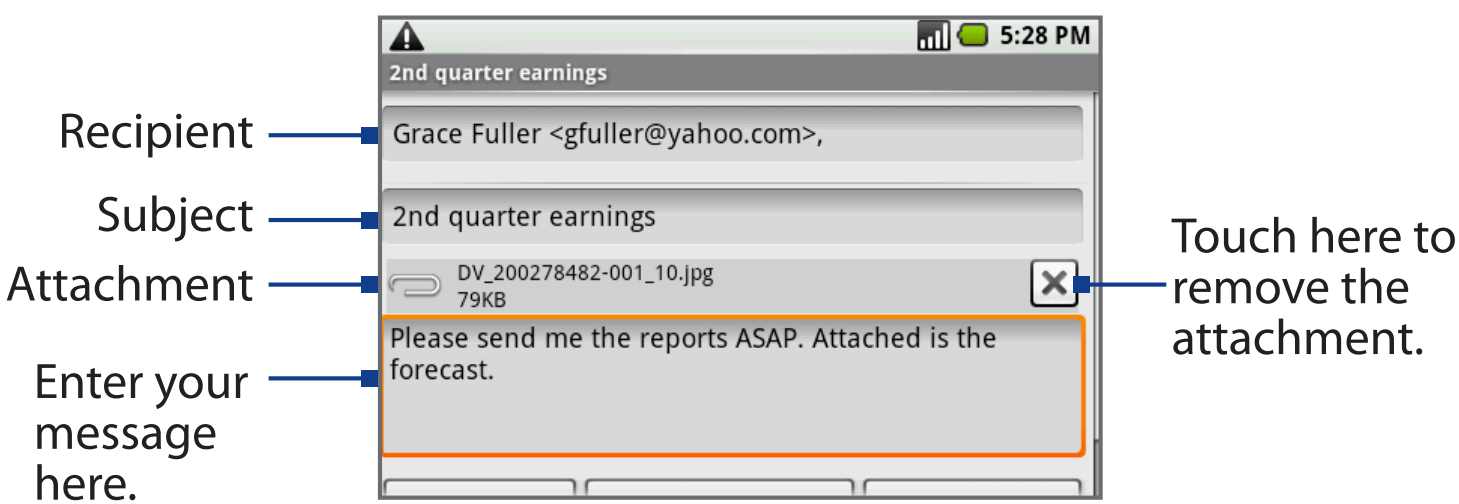

5. Touch **Send**.

For more information about creating and sending e-mails using Gmail or other e-mail services, refer to the "Exchanging Messages" chapter on the User Manual PDF.

17. Surfing the Web and Viewing Internet Videos

Experience desktop-like web surfing when browsing the Internet. You can also watch YouTube videos on your device.

To go to a web page

1. Press HOME, touch the **Applications** tab, then touch **Browser**.
2. Press MENU, then touch **Go to URL**.
3. Open the keyboard, then enter the web page address using the keyboard.
4. Touch **Go** or press ↵ .

To search information

1. Do any of the following:
   - On the Browser screen, press MENU , then touch **Search**
   - On the Home screen, press MENU, then touch **Search** to display the Search widget.
2. Use the keyboard to enter the information you want to search in the search box.
3. Touch **Search** or press ↵ .

To launch YouTube and watch videos

YouTube™ is a free online video streaming service that allows you to search and view videos which have been uploaded by YouTube members.

Note Make sure you have an active data (GPRS/3G) or Wi-Fi connection before you open YouTube.

1. Press HOME, touch the **Applications** tab, then touch **YouTube**.
   The YouTube screen appears with the videos grouped into categories, such as **Featured**, **Most popular**, **Most viewed**, **Top rated**, and more.
2. Touch a video category to display the videos within.
3. Touch a video to play it on the screen.

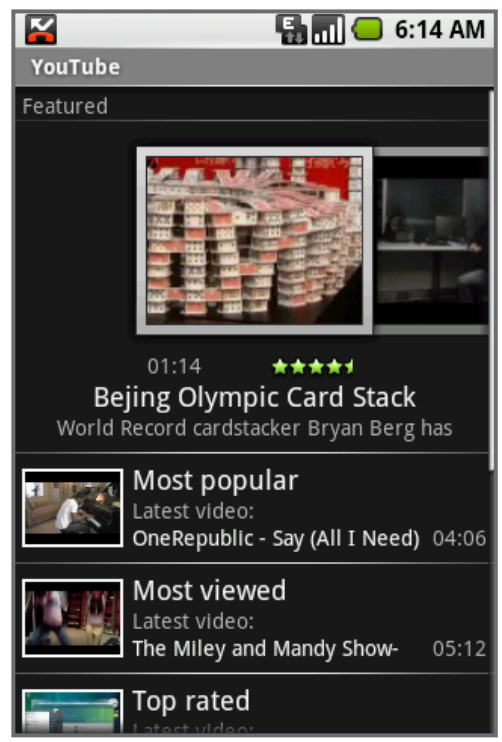

Note The screen automatically switches to landscape orientation when you play a video.

For more information about Browser and YouTube, refer to the "Getting Connected" and "Experiencing Multimedia" chapters on the User Manual PDF.

18. Bluetooth

Connect your device to a Bluetooth stereo headset for hands-free phone conversations.

To connect your device with a Bluetooth stereo headset

1. Make sure that both your device and the Bluetooth stereo headset are turned on and within close range, and that the headset is visible. Refer to the manufacturer's documentation to find out how to set the headset in visible mode.
2. On your device, press HOME > MENU, then touch **Settings**.
3. Touch **Wireless controls**, then select the **Bluetooth** check box to turn Bluetooth on and scan for Bluetooth devices within range.
4. Touch **Bluetooth settings**, then select the headset in the Bluetooth devices section to start pairing.
5. Enter the headset's passcode, then touch **OK**. Refer to the documentation that comes with the headset if you don't know the passcode.
6. When the Bluetooth headset is connected to your device, the Bluetooth connected icon ( ) will appear in the status bar. You can now start using the headset to receive phone calls.

For more information about using Bluetooth, refer to the "Getting Connected" chapter in the User Manual PDF.

19. Managing Your Time

Use **Calendar** and **Alarm Clock** to create events and remind you of your upcoming appointments.

To create an event

1. Press HOME, touch the **Applications** tab, then touch **Calendar**.
2. Press MENU and touch **New event**.
3. Open the keyboard and enter the event name.
4. Specify the event time, location, description, and the calendar to store the event.
5. Set the event reminder time, then select whether the event is recurring.
6. Touch **Save**.

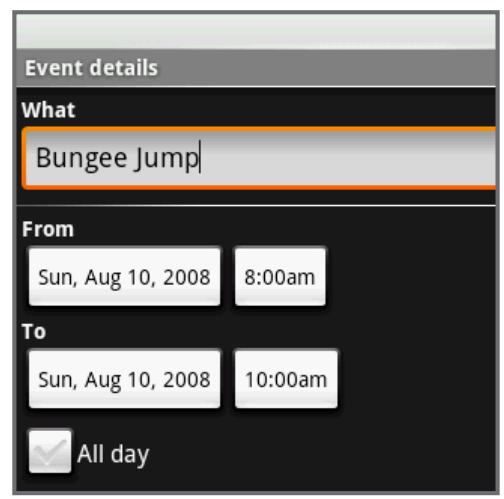

If you have set up an event reminder time, the event notification icon ( ) displays in the status bar when you have an upcoming event.

Touch and hold the status bar, slide your finger down the screen to open the notifications panel, then select the event. You are given the option to snooze or dismiss the reminder.

To set an alarm

1. Press HOME, touch the **Applications** tab, then touch **Alarm Clock**.
2. Touch a default alarm on the screen.
3. Select the **Alarm** check box to turn the alarm on.
4. Touch **Time** to set the alarm time, then touch **Set** when finished.
5. Touch **Ringtone** to select the alarm ring tone, then select **Vibrate** if you want the device to vibrate when the alarm goes off.
6. Touch **Repeat** if you want the alarm to repeat.

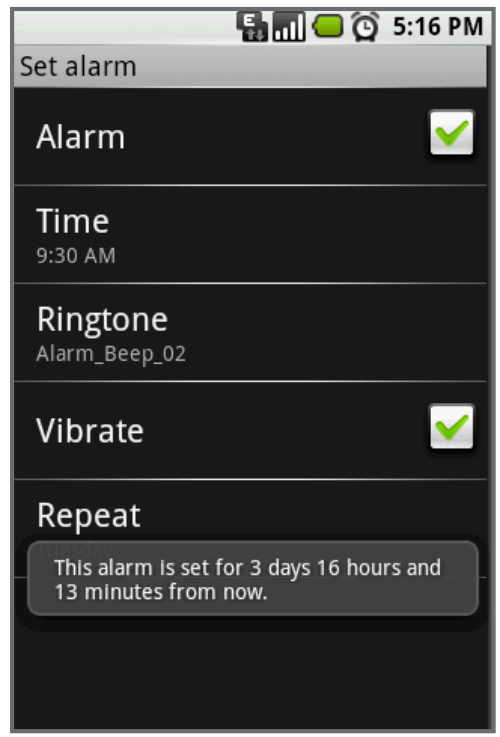

7. Press BACK to set the alarm and return to the Alarm Clock screen.

For more information about using Calendar and the Alarm Clock, refer to the "Managing Your Time" chapter in the User Manual PDF.

20. Taking Pictures

Use the built-in 3.2 megapixel camera of your device to take pictures.

Note Install a storage card before using the Camera.

To take pictures

1. Frame your subject on the screen.
2. Press the CAPTURE button half-way to activate auto-focus. The auto-focus indicator appears in the upper-right corner of the screen and the device beeps to indicate that the subject is in focus.

3. Fully press the CAPTURE button to take the shot.
4. After taking the shot, you are given the option to save, delete, send, or assign the picture.

To learn more about the Camera, refer to the "Experiencing Multimedia" chapter in the User Manual PDF.

21. Copying Multimedia Files to Your Device

Before using **Pictures** or **Music**, copy multimedia files to the storage card installed on your device.

1. Connect the device to the computer using the USB cable.
2. When the USB connected icon ( ) appears in the status bar, touch and hold the status bar, then slide your finger downward to open the notifications panel.
3. Touch **USB connected**, then touch **Mount**.
4. On your computer, navigate to the USB flash drive, then open it.
5. Create two top-level folders on the storage card then name them "Music" and "Pictures".

   Tip You can also create folders within the Music or Pictures folder to organize your music files or pictures.

6. Copy your music files and pictures into the created folders.
7. When finished, disconnect the device from the computer.

   Note The device will not recognize the storage card while it is being used as a USB flash drive. Remember to disconnect the device from the computer when you are done copying files to the storage card.

22. Listening to Music

After you copied music files to the storage card, launch **Music** to play back music on your device.

To play music

1. Press HOME, touch the **Applications** tab, then touch **Music**.
   The Music library screen opens.
2. Touch a music category.
3. Touch and hold an item (a song, artist, album, or playlist) to open the options menu, then touch **Play**.
   The playback screen opens and plays your music.

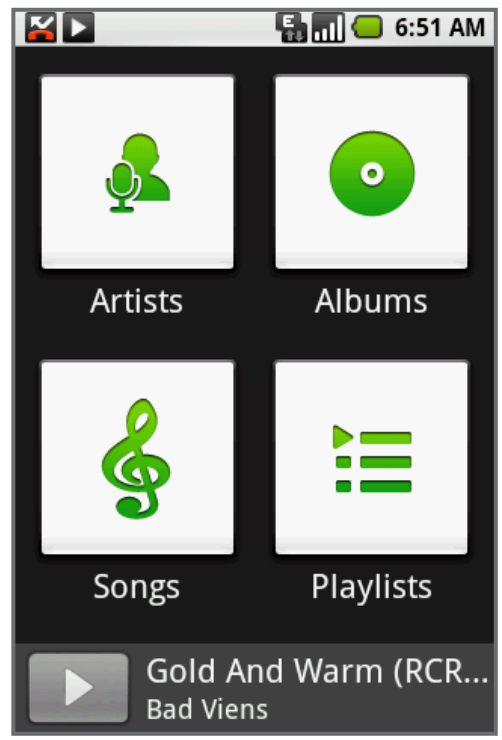

For more information about using the Music application, refer to the "Experiencing Multimedia" chapter in the User Manual PDF.

23. Viewing Pictures

After you copied pictures to the storage card, or after you captured a picture using the Camera, open **Pictures** to view, edit, assign, and share your pictures.

To view pictures

1. Press HOME, touch the **Applications** tab, then touch **Pictures**.
2. Touch an album to view the pictures within, then touch a picture thumbnail to display it in full screen.
3. Touch the screen to display the scroll arrows, then touch the left arrow to view the previous picture, or touch the right arrow to view the next picture.

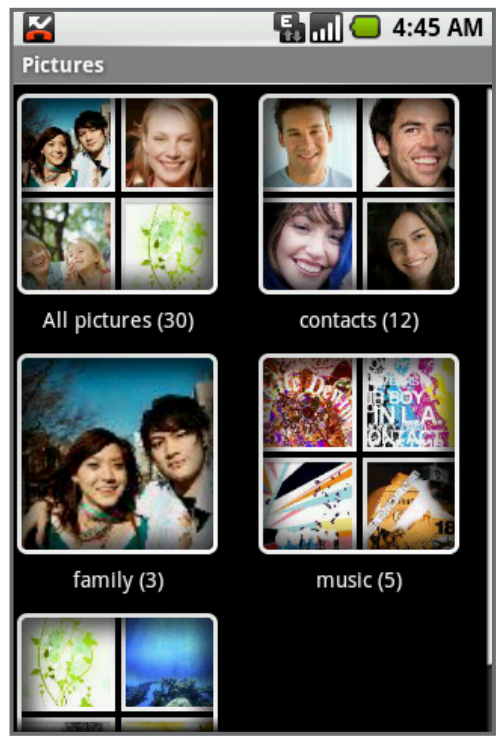

4. While viewing a picture in full screen, press MENU to edit, send, or view a slideshow of all pictures in the album.

For more information about using the Pictures application, refer to the "Experiencing Multimedia" chapter in the User Manual PDF.

24. Synchronizing Your Device

Google applications on your phone, such as Gmail, Calendar, and Contacts, give you access to the same personal information that you add, view, and edit using Gmail or Google Calendar on the web.

Note By default, all personal information in Gmail, Calendar, and Contacts will sync whenever you make a change on a contact or event, or receive a new message.

To select which application to synchronize

You can control data synchronization by selecting which applications to sync with those on the web.

1. Press HOME > MENU, then touch **Settings > Data synchronization**.
2. Clear **Auto-sync** to manually select individual applications to synchronize.
3. Select **Gmail**, **Calendar**, or **Contacts** to begin synchronization of e-mails, events, and contacts on your device and on the web.
4. If you want to stop synchronization, press MENU, then touch **Cancel sync**.

For more information about synchronization, refer to the "Synchronizing Information" chapter in the User Manual PDF.

25. Downloading Applications

Open **Android Market** to view, download, and install useful applications and fun games to your device.

Note You need to have an active data (GPRS/3G) or Wi-Fi connection before you can download and install an application.

To download and install an application

1. Press HOME, touch the **Applications** tab, then touch **Market**.
2. Touch a featured application on top of the screen to open the application details screen.

   Tip You can also touch **Applications** or **Games** to view and select applications in a categorized list. Touch an application in the list to open its details screen.

3. Touch **Install**. After the application is downloaded and installed on your device, the content download icon ( ) appears in the notification area of the status bar.
4. On the Android Market screen, touch **My downloads**.
5. Touch the installed application in the list, then touch **Open**.

For more information about Android Market, refer to the "Getting Applications from Android Market" chapter in the User Manual PDF.

26. Resetting Your Device

If you experience some sluggishness with your device, you can perform a reset to shut down all programs and restart your device.

To perform a soft reset

1. Remove the back cover.
2. Remove the battery for a few seconds.
3. Reinstall the battery, replace the back cover, then turn on the device.

You can also perform a hard reset. **After a hard reset, the device is restored to its default settings — the way it was when you first purchased your device and turned it on**. Only the operating system and pre-installed programs will remain after a hard reset.

To learn how to perform a hard reset, refer to the "Managing Your Device" chapter in the User Manual PDF.

Intellectual Property Right Information

Google, Gmail, Google Talk, Google Maps, YouTube, Android, and Android Market are trademarks of Google Inc.

Important Health Information and Safety Precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

ELECTRICAL SAFETY

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

CAUTION: Connecting to an improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

SAFETY PRECAUTIONS FOR POWER SUPPLY UNIT

- **Use the correct external power source**

  A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

  This product should be operated only with the following designated power supply unit(s):

  AC Adapter
  - Phihong, Model PSAA05K-050
  - Phihong, Model PSAA05E-050
  - Delta, Model ADP-5FH D

- **Handle battery packs carefully**

  This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 60˚C (140˚F).

WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

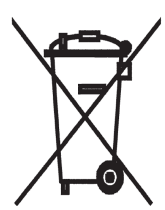

Note: This product should be operated only with the following designated Battery Pack(s).

- HTC, Model DREA160

- **Take extra precautions**
  - Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
  - Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
  - The phone should be only connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
  - Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.
  - Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult the doctor immediately if the battery is swallowed.
  - If the battery leaks:
    - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
    - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
    - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

SAFETY PRECAUTIONS FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

PREVENTION OF HEARING LOSS

CAUTION: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Note For France, Earphone (listed below) for this device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1.

- Earphone, manufactured by HTC, Model HS S200.

SAFETY IN AIRCRAFT

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when on board an aircraft, remember to turn off your phone by switching to Airplane Mode.

ENVIRONMENT RESTRICTIONS

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fuelling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

EXPLOSIVE ATMOSPHERES

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

ROAD SAFETY

Vehicle drivers in motion are not permitted to use telephony services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

SAFETY PRECAUTIONS FOR RF EXPOSURE

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCE WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

NONIONIZING RADIATION

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

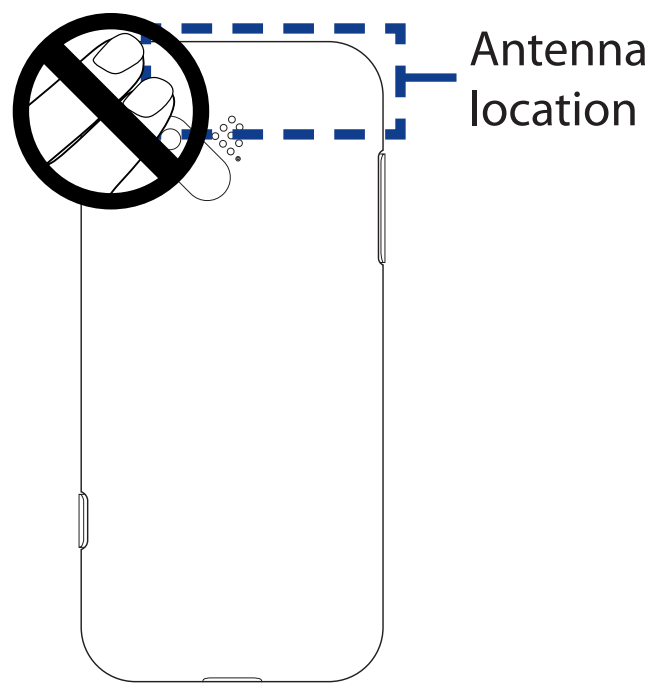

General Precautions

- **Avoid applying excessive pressure to the device**
  Do not apply excessive pressure on the screen and the device to prevent damaging them and remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use your finger when interacting with the touch screen. Cracked display screens due to improper handling are not covered by the warranty.
- **Device getting warm after prolonged use**
  When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery or browsing the web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.
- **Heed service markings**
  Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself. Service needed on components inside the device should be done by an authorized service technician or provider.
- **Damage requiring service**
  Unplug the product from the electrical outlet and refer servicing to an authorized service technician or provider under the following conditions:
  - Liquid has been spilled or an object has fallen onto the product.
  - The product has been exposed to rain or water.
  - The product has been dropped or damaged.
  - There are noticeable signs of overheating.
  - The product does not operate normally when you follow the operating instructions.

- **Avoid hot areas**
  The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- **Avoid wet areas**
  Never use the product in a wet location.
- **Avoid using your device after a dramatic change in temperature**
  When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

  NOTICE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.
- **Avoid pushing objects into product**
  Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.
- **Mounting accessories**
  Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- **Avoid unstable mounting**
  Do not place the product with an unstable base.

- **Use product with approved equipment**
  This product should be used only with personal computers and options identified as suitable for use with your equipment.
- **Adjust the volume**
  Turn down the volume before using headphones or other audio devices.
- **Cleaning**
  Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

Regulatory Agency Identifications

For regulatory identification purposes, your product is assigned a model number of **DREA110**.

To ensure continued reliable and safe operation of your device, use only the accessories listed below with your **DREA110**.

The Battery Pack has been assigned a model number of **DREA160**.

Note This product is intended for use with a certified Class 2 Limited Power Source, rated 5 Volts DC, maximum 1 Amp power supply unit.

Telecommunications & Internet Association (TIA) safety information

- **Pacemakers**
  The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker.

  These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:
  - Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
  - Should not carry the phone in a breast pocket.
  - Should use the ear opposite the pacemaker to minimize the potential for interference. If you have any reason to suspect that interference is taking place, turn the phone OFF immediately.
- **Hearing Aids**
  Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.
- **Other Medical Devices**
  If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

  Turn the phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

WEEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal.

The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance

This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.